## KNT2 pneumatic mechanism operating instructions



Top view (as seated)



Front view (as facing chair)

- 1) Seat height adjustment:
  - Lift tab up to adjust seat height
- 1 Back tilt adjustment:
  - Pull rod out to allow tilt, push rod back in to lock tilt
- (2) Back tension adjustment:

Turn knob clockwise to increase tension, turn counterclockwise to lessen tension



