


Top View

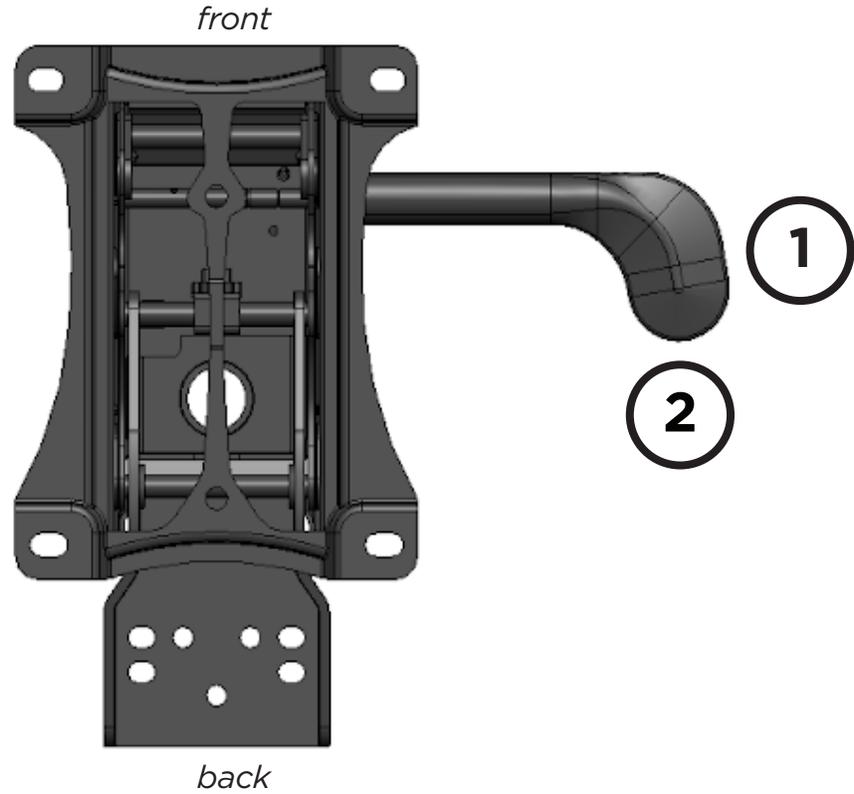

1 **Seat Height Adjustment:** Push tab down to adjust seat height.



2 **Back Tilt Adjustment:** To recline, pull the paddle out from the control. To lock, push the paddle in at either upright or fully reclined position.

Available on

- Revel