


Top View

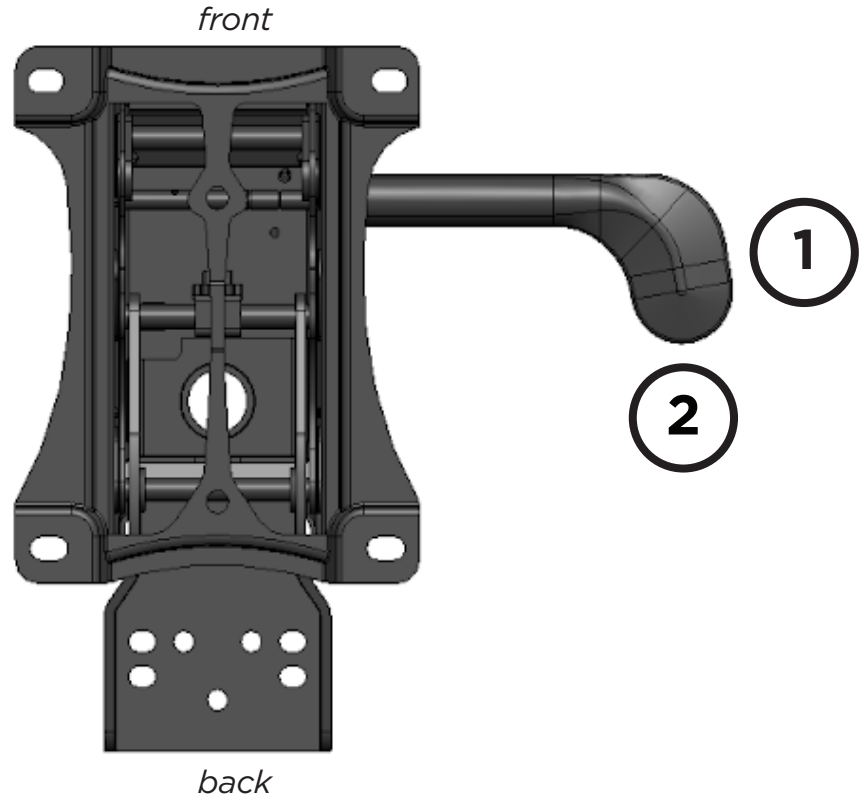

1

Seat Height Adjustment: Push tab down to adjust seat height.

2

Back Tilt Adjustment: To recline, pull the paddle out from the control. To lock, push the paddle in at either upright or fully reclined position.

Available on

- Revel