


Top View

front

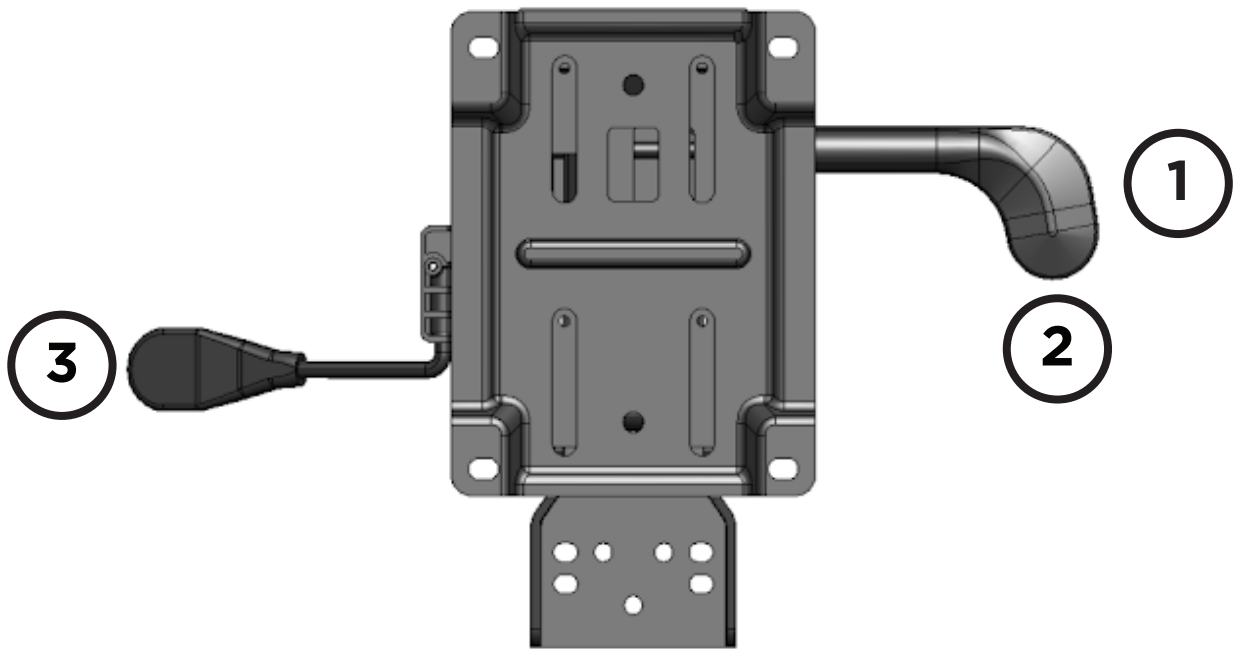

back

- 1 **Seat Height Adjustment:** Push tab down to adjust seat height.
- 2 **Back Tilt Adjustment:** To recline, pull the paddle out from the control. To lock, push the paddle in at either upright or fully reclined position.
- 3 **Seat Slider Adjustment:** Lift the lever to allow the seat to slide, release the lever to lock the seat in place.

Available on

- Revel