

## JoJo assembly instructions

---



## Important safety instructions

When using an electrical furnishing, basic precautions should always be followed, including the following:

This furnishing is made for commercial use only.

Read all instructions before using this furnishing:

## DANGER

To reduce the risk of electrical shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

## WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use the furnishing only for its intended use as described in these instructions.  
Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Use only SJT 18 AWG cord.
8. Risk of injury. Maximum load 75 pounds.

To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

**Note** – servicing is only to be performed by an authorized representative.

 
### Servicing of double-insulated products

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words “DOUBLE INSULATION” OR “DOUBLE INSULATED”. The symbol (square within a square) is also able to be marked on the product.


### Save these instructions

## Components:


**Note:** Lamp can be controlled with wireless switch only. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

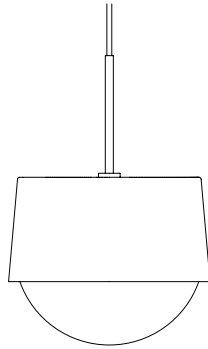


Lamp

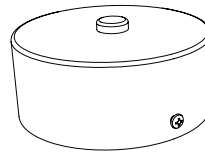 


Canopy kit

 

Strain relief clamp

 


Pin tool

 

2x Screws



 2x 2-way connectors  
1x 3-way connector

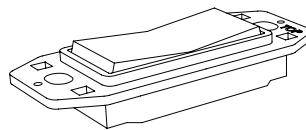


Switch  
(may ship separate)

**Assembly:**


1. Disassemble canopy kit by removing the canopy nut and two side screws. **Do not discard any components.** (Figure A)

**Note:** For wireless switch programming instructions, move to step 9.

2. Route the building wiring through the center hole of the canopy mounting plate and attach the plate to the ceiling junction box using included screws. (Figure B)

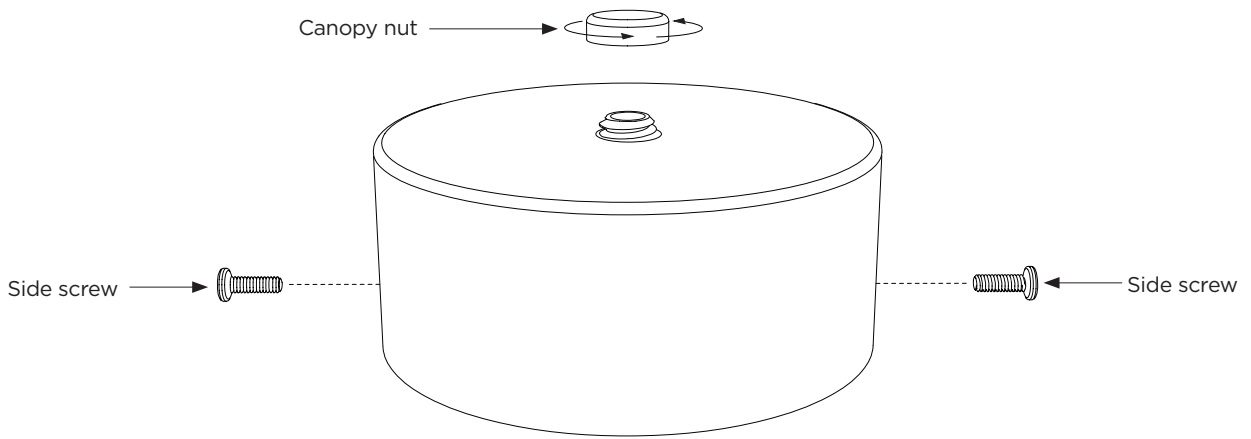 


**Figure A**

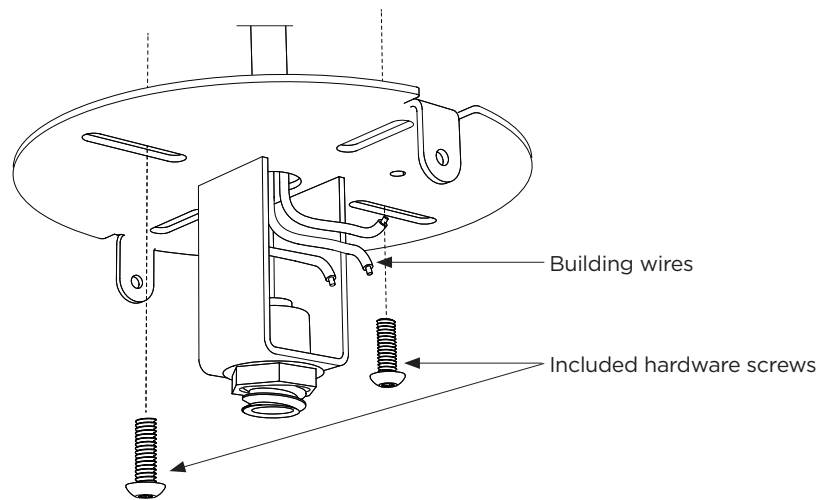 


**Figure B**

**Assembly continued:**

3. Feed the lamp cord through the canopy nut, the canopy cover, and through the bottom of the mounting plate, and pull the cord until the lamp reaches desired height. Mark the cord where it meets the top of the mounting plate bushing. **(Figure C)**
4. Pull the cord further through the mounting plate and attach the strain relief clamp at the point marked in Step 3 and hand-tighten screws to a torque of 0.67 Nm (0.50 ft-lbs). **Note:** The clamp cannot be closer than 6" from the end of the cord. **(Figure D)**

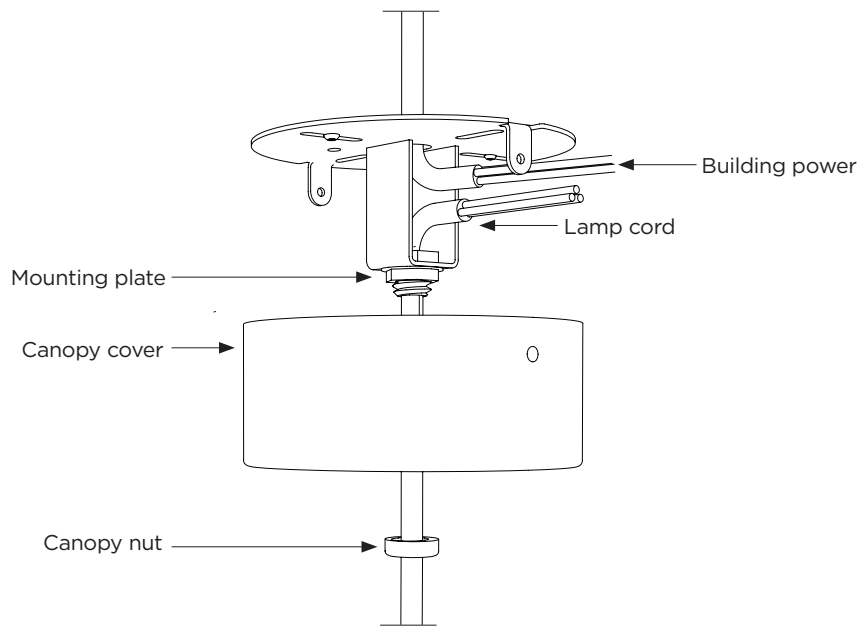 

**Figure C**

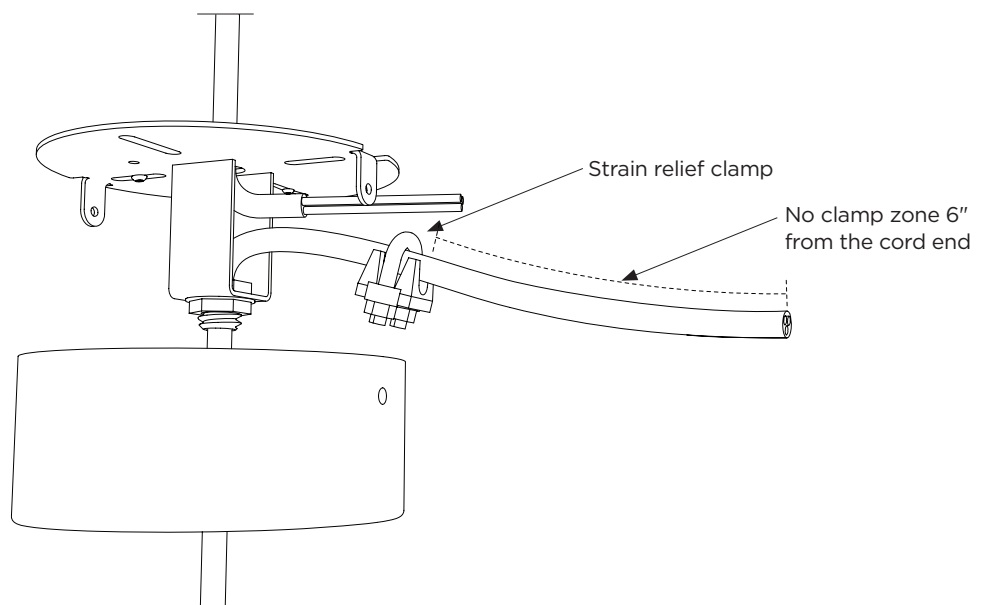 


**Figure D**


**Assembly continued:**

5. Cut excess cord above the strain relief clamp allowing a minimum of 6" to remain. Strip outer jacket of the cord back to three inches. Feed cord back through the mounting plate until the strain relief rests on the mounting plate, allowing the lamp to hang. (**Figure E**)

**Note:** It is suggested to wrap the cord with electrical tape before cutting to prevent the fabric sleeve from fraying. (**Figure F**)

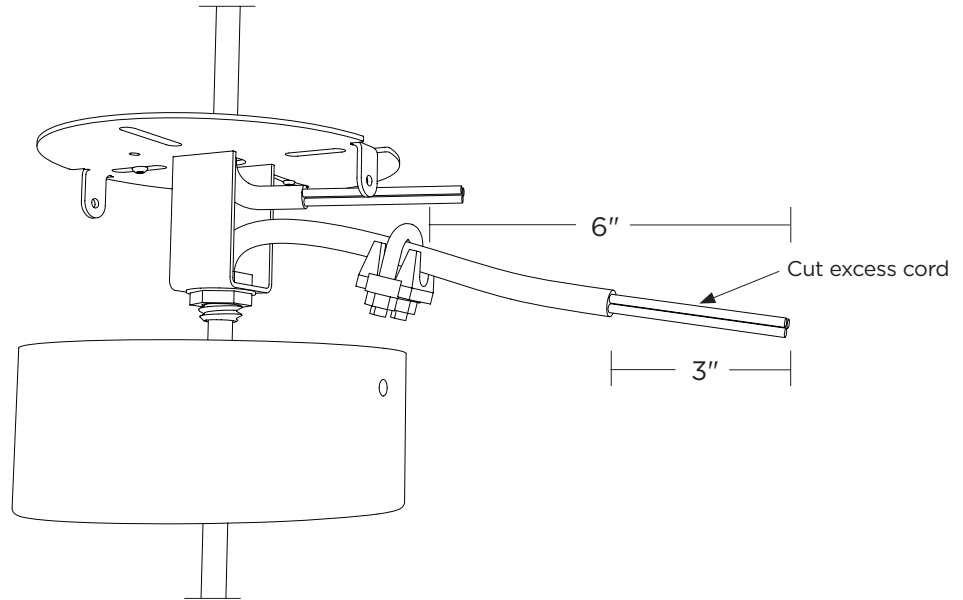 


**Figure E**

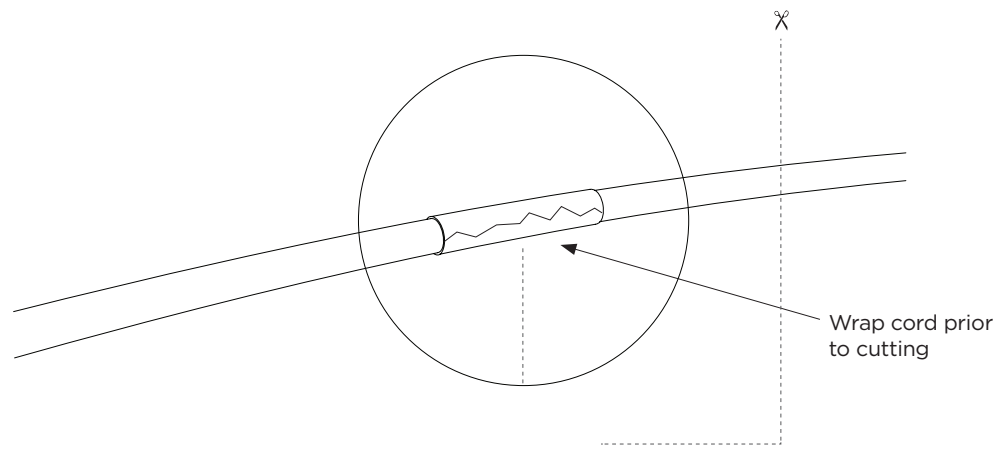 


**Figure F**

**Assembly continued:**

6. Connect the cord from the lamp to the building AC cord using the included 2-way and 3-way connectors. Connect white to white, black to black, and green to green. **(Figure G)**
7. Tuck wires and wire connectors into the canopy cover and slide the cover up, securing to the mounting plate with included screws. **(Figure H)**

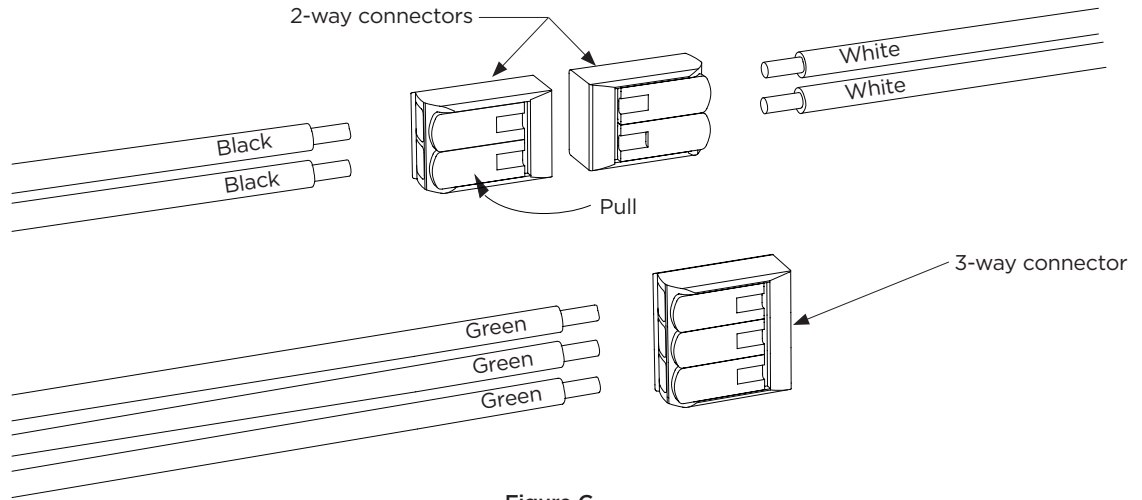 


**Figure G**

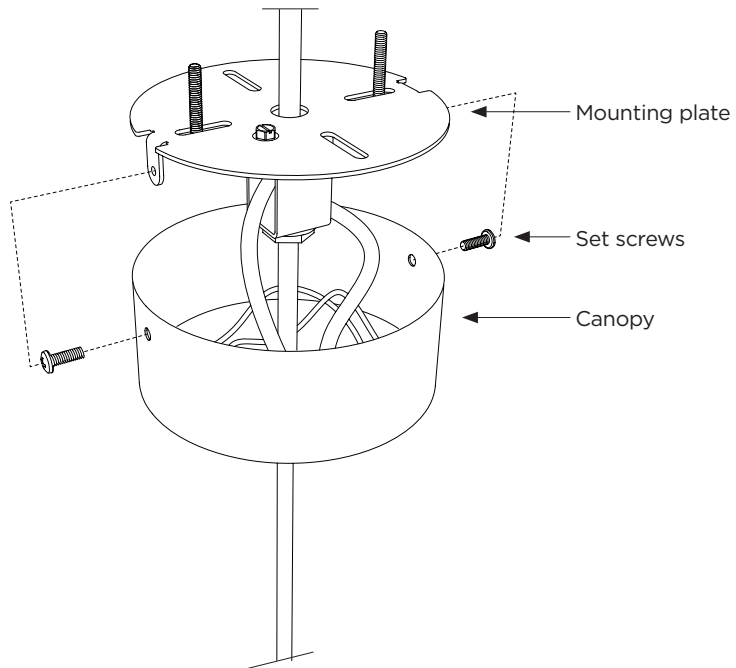 


**Figure H**

**Assembly continued:**

8. Screw trim bushing onto the exposed thread after canopy cover is in its installed position. (Figure I)
9. Locate the three holes on the top of the shade, press and hold the "Link" button for 3 seconds using the included pin tool. The light will flash on and off, indicating "Link Mode". (Figure J)

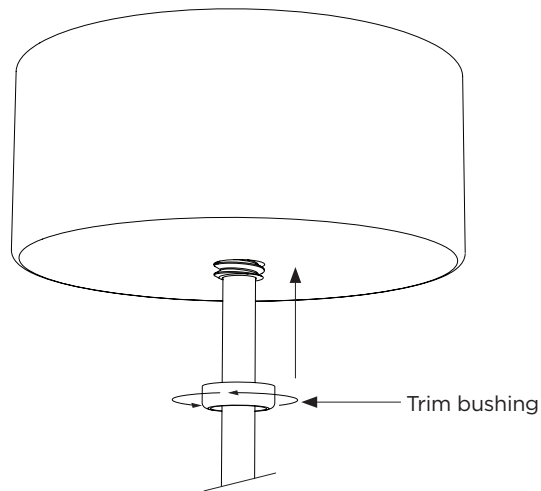 

**Figure I**

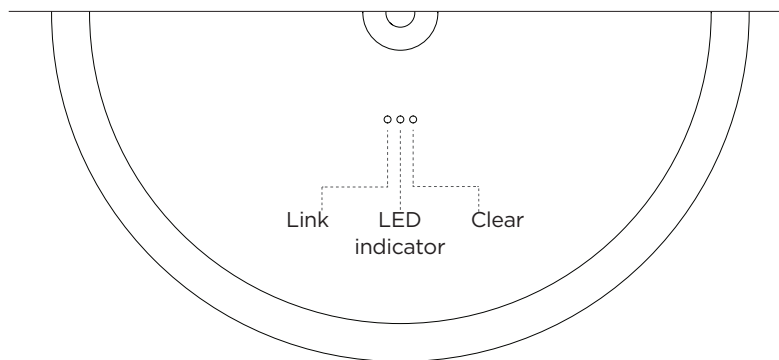 

**Figure J**



## Assembly continued:

10. With the light still in link mode, rapidly press the “top” side of the switch 3 times. **(Figure K)**
11. If step 10 is successful, the light will pause for 3 seconds and then the flashing will continue to flash for 30 seconds remaining in link mode. If you wish to connect additional switches to the light, please repeat Step 10 with the next switch.
12. Once all desired switches are linked, let the light continue to flash for 30 seconds without pressing a switch. After the flashing has stopped, the switches will be linked and the light will be ready for use.

**Note:** If linking is unsuccessful or if you encounter an issue of any kind, press and hold the clear button on the shade for 3 seconds. This command will purge all links and put the lamp in linking mode from which you will return to step 10.

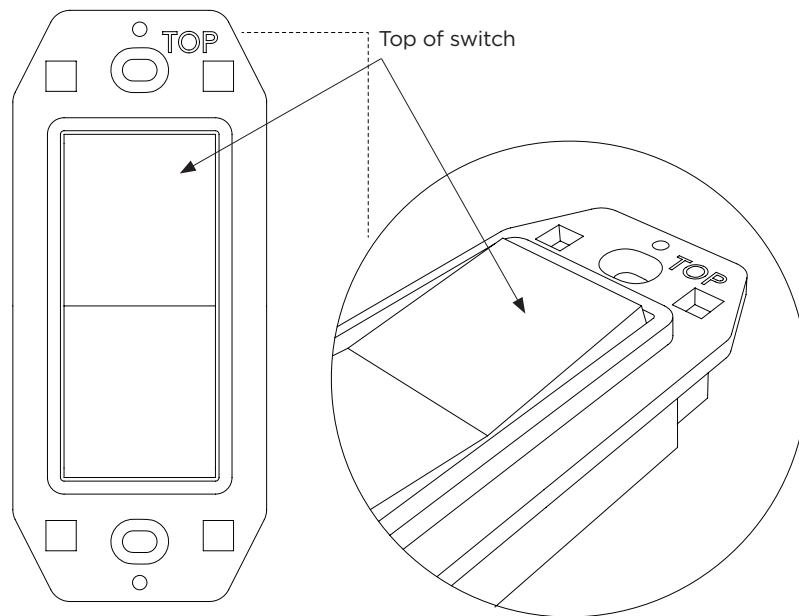 


Figure K