

Electric Height Adjustable Operating Instructions

For paddle switch height adjustable desks





Table of contents

Safety instructions	3
Overview	4
Raising and lowering desk	4
Programming desk height limits	5
Programming favorite positions	5
Driving to favorite position	5
Erasing favorite position	5
Connecting to Bluetooth®	5

Important safety instructions

When using an electrical furnishing, basic precautions should always be followed, including the following:

This furnishing is made for commercial use only.

Read all instructions before using this furnishing:

DANGER

To reduce the risk of electrical shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use the furnishing only for its intended use as described in these instructions.
Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Use only SJT 18 AWG cord.
8. Risk of injury. Maximum load 75 pounds.

To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Note – servicing is only to be performed by an authorized representative.


Servicing of double-insulated products




In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words “DOUBLE INSULATION” OR “DOUBLE INSULATED”. The symbol (square within a square) is also able to be marked on the product.

Save these instructions

Switch overview

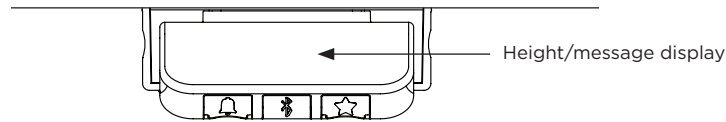- The paddle switch has an up and down operation, and three function buttons
- Height will be displayed on the top of the paddle switch



Symbol	Description	Function
	Reminder	Setting reminders
	Bluetooth®	Connecting the Desk Control™ via Bluetooth® app
	Favorite	Save favorite height positions

Raising and lowering your desk

1. To raise the desk, tilt and hold up the paddle switch up (**Figure A**)
2. To lower the desk, press and hold down the paddle switch (**Figure B**)
3. For up or down, release the paddle switch when you have reached the desired height

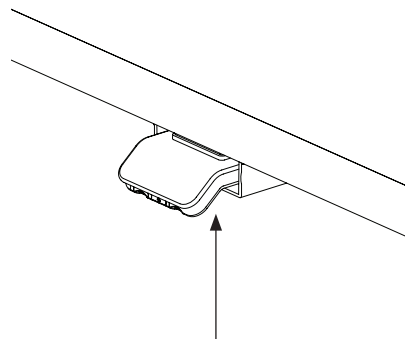


FIGURE A

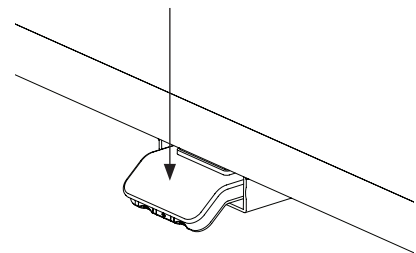


FIGURE B

Programming desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height

Setting upper limit

1. Adjust desk to maximum allowable height desired
2. Press Bluetooth® button and tilt paddle switch up at the same time until the light flashes
3. Release Bluetooth® button and paddle switch

Setting lower limit

1. Adjust desk to minimum allowable height desired
2. Press Bluetooth® button and tilt paddle switch up at the same time until the light flashes
3. Release Bluetooth® button and paddle switch

Programming favorite position

1. Adjust desk to preferred position
 2. Press and hold star button for two seconds
- One favorite position can be saved
 - The LED flashes white two times to indicate that saving the position is in progress
 - Not until the LED becomes static white, has the position been saved
 - If the user adjusts the desk to another position and saves this position, it will overwrite the favorite position closest to the current position

Driving to favorite position

- After saving the favorite position, the user can reach the position by tilting/pressing the paddle switch
1. Tilt/press and hold - when a saved position has been reached, the desk stops
 2. Release the paddle switch within one second
- This way the user can easily change between sitting and standing height without looking at the paddle switch
 - When the desk stops at the favorite position, the user can continue to tilt/press the paddle switch for one second or release the paddle switch and immediately tilt/press the paddle switch again
 - This allows the desk to move past the favorite position and continue its movement

Erasing favorite position

1. Press the star button for eight seconds to erase all favorite positions
- The LED light flashes red when all favorite positions are erased

Connecting to Bluetooth®

1. The apps are called "Desk Control™" and they have the following app logo in iTunes and Apple App store, Google Play store, and Microsoft Store
2. Press the Bluetooth® button in the middle for two seconds to enable pairing mode. The LED flashes blue while the desk panel is in pairing mode.