



Pur mechanism with seat slider operating instructions

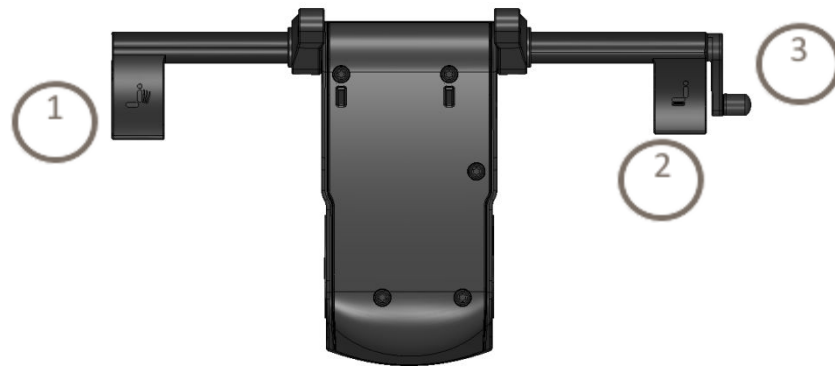

Top view (as seated)

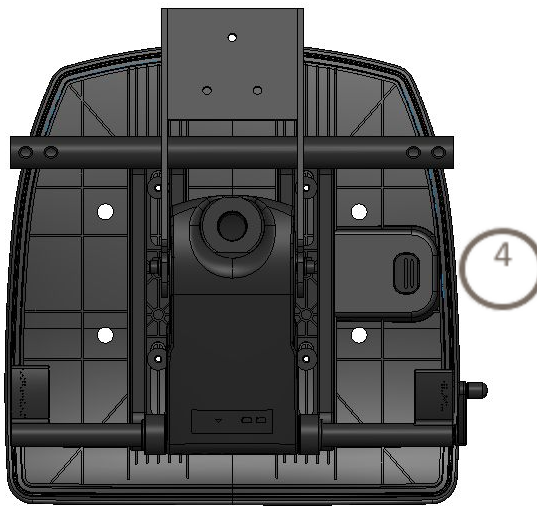

Bottom view (mechanism and seat pan)

- ① **Back tilt adjustment:**
Lift tab up to release tilt, push tab down to lock tilt
- ② **Seat height adjustment:**
Lift tab up to adjust seat height
- ③ **Back tension adjustment:**
Pull knob straight out then turn clockwise to tighten, turn counterclockwise to loosen, then push knob back in when complete
- ④ **Seat slider adjustment:**
Push in button to allow forward and backward seat adjustment