

Staks slide-out storage assembly instructions



Staks slide-out storage tower user guide

1. The SOSR/SOSL Storage Towers ship completed with no assembly required. However, some installations may require gaining access to the inside of the cabinet and/or making height adjustments to adapt to variations in floor surfaces.
2. To remove the inner slide out, first remove the adhesive cover on the back side of the slide out, then insert a 6mm Allen wrench and turn clockwise to retract the guide pin. Next, locate both orange latches on the bottom of the slide out and pull inwards. With both latches now disengaged, the inner slide out is free and can be pulled out completely from the cabinet. Reverse these steps to re-install.
3. After the outer cabinet has been leveled, cycle the slide out to ensure both of the soft wheel casters on the bottom of the slide out are making contact with the floor at all times. If the casters are up too high to touch the floor, or down too low causing a bind during operation, then height adjustments need to be made. To adjust the height of the caster, insert a 6mm Allen wrench and rotate as necessary to adjust the height up or down.

