



Locks matrix


Intermix

Storage lockers



LCK / LOCKING

Key locking / Key locking specific (black)

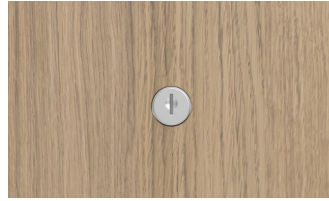

LCK / LOCKING

Key locking / Key locking specific (silver)




PRLK1 / PRLK2

Assigned / Shared electrical lock (black)



PRLK1 / PRLK2

Assigned / Shared electrical lock (silver)

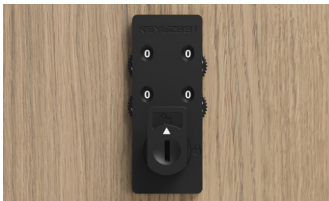

KYAD1

Mechanical lock / Shared electrical lock (matte black)




KYAD1

Mechanical lock / Shared electrical lock (matte white)




KYAD1

Mechanical lock / Shared electrical lock (satin nickel gold)

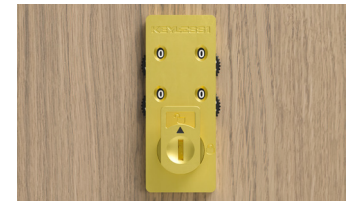


KYAD1

Mechanical lock / Shared electrical lock (satin gold)

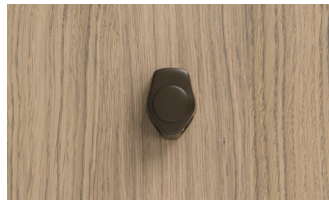

PHL1


Pad lock hasp (black)

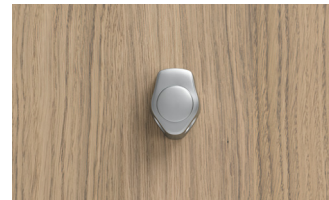

PHL1


Pad lock hasp (silver)

Pull finishes - Silver/white locks

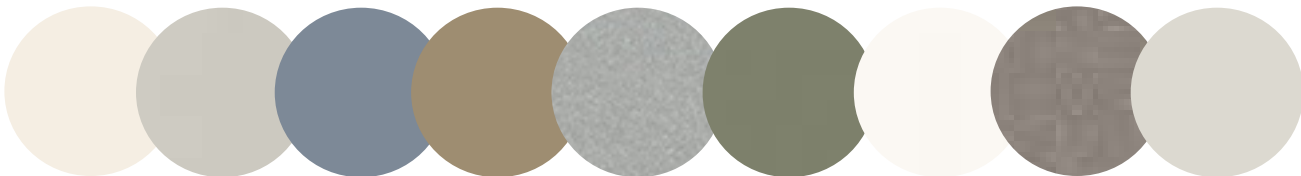

Bone White Chalk Heron Latte Luster Grey Moss Polar Warm Grey Stone

Pull finishes - Black locks

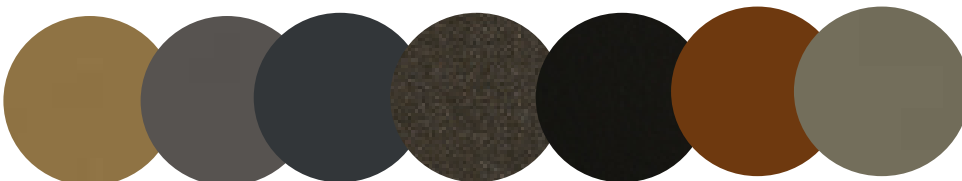

Gold Graphite Ion Oiled Bronze Onyx Rust Soft Bronze



Mechanical lock instructions

Programming:

The shared user dial lock is ideal for one-time use of storage, for example guest lockers or for lockers in public areas. The function is similar to a hotel safe. A user occupies the locker and enters a personal code of his choice to lock the storage. To retrieve his belongings, the user enters the programmed code, which allows the lock to be opened while simultaneously deleting the code. The lock is now ready for the next user.

To lock:

1. Close the door
2. Make sure the knob is pointing up, to the **UNLOCK** position, then set any 4-digit code.
3. Turn knob to the **LOCK** position.
4. Scramble the dials.

To unlock:

1. Reenter your code.
2. Turn the knob to the **UNLOCK** position.
3. Open the door.
4. Keep the knob facing the **UNLOCK** position, and scramble the dials for the next user.


Master key code bypass:

1. Insert the master key, pointing towards the **LOCK** position.
2. Turn the knob to the **UNLOCK** position, and access the locker, then close the door while keeping the knob facing **UNLOCK**.
3. Return the knob to the **LOCK** position, and remove the key.

NOTE: Locker will remain locked and code will remain the same.

User code retrieval and reset:

1. Insert the master key pointing towards the **LOCK** position, and then turn the knob to the **UNLOCK** position.
2. With each dial, spin until it stops. After setting each dial, the last used code will display.
3. Turn the knob back to **LOCK** position and remove the key. Return the knob to **UNLOCK** and scramble the dials for the next user.

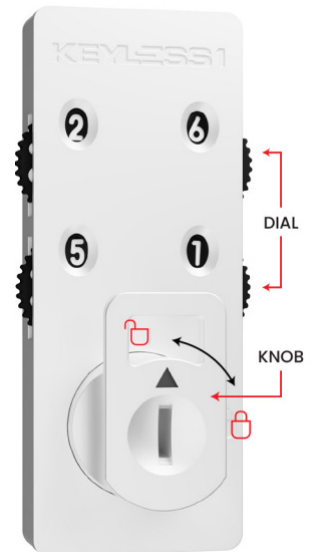



Electrical lock instructions

Programming:

Pearl is easy to program and operate.


- Type the user code (factory default 1234) and press ➡ (enter) to unlock or lock the cabinet
- The supervisor can change operating codes, modes and restore lock settings.
- Button locations, indicator lights and knob referenced in the programming instructions are shown below.



NOTE: While Pearl is easy to program, we highly recommend reading the complete programming instructions prior to making any changes. Remember to keep track of any programming changes.

To operate Pearl lock:

1. To unlock, type a valid code, press ➡ (enter) and rotate knob clockwise 90°.
2. To lock, rotate knob 90° counter clockwise.

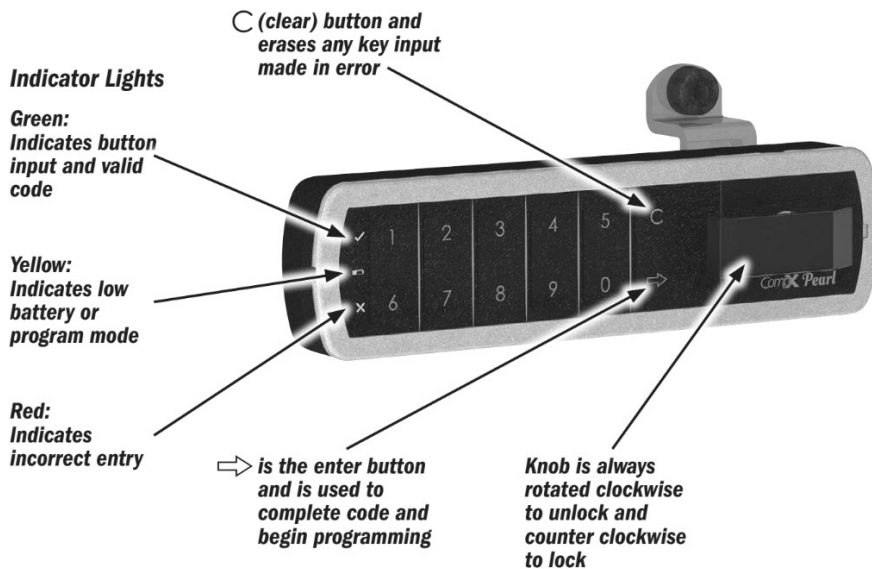




Electrical lock instructions


Programming mode:

- To enter programming mode you must know the supervisor code. The default supervisor code is 12345.
- Once in programming mode, multiple changes can be made prior to exiting programming.
- There is a 10 second programming time limit between each step. If Pearl times out or an error is made, programming will end and you will need to enter programming mode again.
 1. Lock must be in locked position prior to entering programming mode.
 2. Type supervisor code and press (enter). ➡
 3. Rotate the knob to the unlocked position and press and hold (enter) for 3 seconds (yellow indicator light will illuminate) ➡
 4. With the yellow indicator light illuminated, programming can begin.

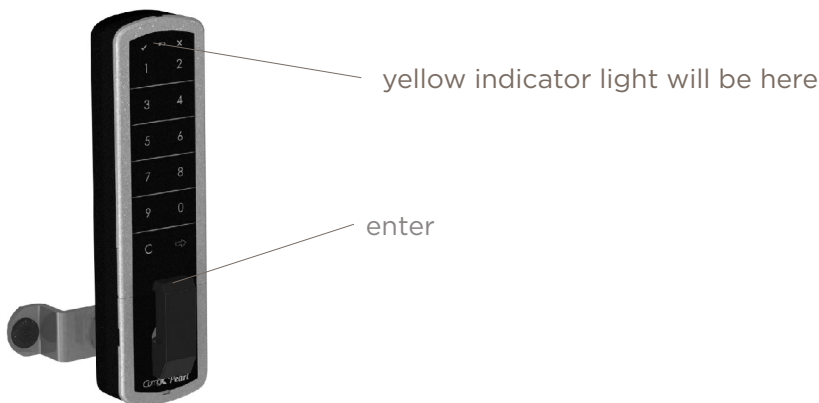

Changing the user code:

- To change the user code you must be in **Programming Mode** first.
- The factory default user code is **1234** (user codes must be 4 to 8 digits in length).
- There is a **10 second** programming time limit between each step. If Pearl times out or an error is made, programming will end and you will need to enter programming mode again.
 1. Place Pearl into programming mode
 2. Press 1 and then press (enter) ➡
 3. Type the current user code and press (enter) ➡
 4. Type the new user code and press (enter) ➡
 5. Retype the new user code and press (enter) ➡
 6. If successful, the **green** indicator light will illuminate for 1 second
- Continue programming or press 9 and then (enter) to exit programming ➡

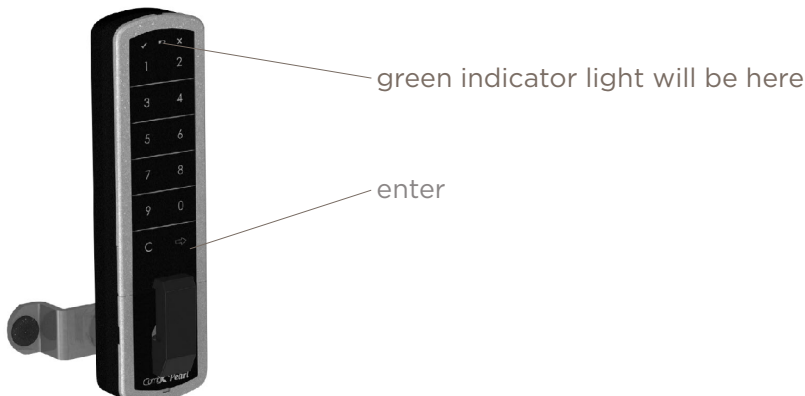



Electrical lock instructions

Changing the supervisor code:

- To change the user code you must be in **Programming Mode** first.
- The factory default supervisor code is **12345** (user codes must be 4 to 8 digits in length).
- There is a **10 second** programming time limit between each step. If Pearl times out or an error is made, programming will end and you will need to enter programming mode again.
 1. Place Pearl into programming mode
 2. Press **2** and then press (enter) ➡
 3. Type the current supervisor code and press (enter) ➡
 4. Type the new supervisor code and press (enter) ➡
 5. Retype the new supervisor code and press (enter) ➡
 6. If successful, the **green** indicator light will illuminate for 1 second
- Continue programming or press 9 and then (enter) to exit programming ➡




NOTE: Pearl features a reset code which will restore the default supervisor code and user code. Pearl was shipped with reset stickers – one should be attached to the back of the Pearl, and the extra sticker should be saved in a safe and secure location for future reference.

- To restore the factory default supervisor and user code, type the Reset Code assigned to the Pearl and press (enter). ➡

Single use mode/standard mode:

- Single Use Mode allows for a revolving user code so multiple people may use the lock without having to reprogram the Pearl each time.
- **Standard Mode** operates with a fixed code. To change the code, follow the **Changing the User Code** steps.
- To change the Pearl to **Single Use or Standard Mode**, follow the steps to enter programming mode.
- There is a **10 second** programming time limit between each step. If Pearl times out or an error is made, programming will end and you will need to enter programming mode again.
- Place Pearl into programming mode.
 1. To turn Single Use Mode "ON": type **51** and then press (enter) ➡
 2. To return to Standard Mode: type **50** and then press (enter) ➡
 3. If successful, the **green** indicator light will illuminate for 1 second
 4. Continue programming or press **9** and then (enter) to exit programming. ➡
- NOTE: Returning to Standard Mode will reset the factory user default code (**1234**).

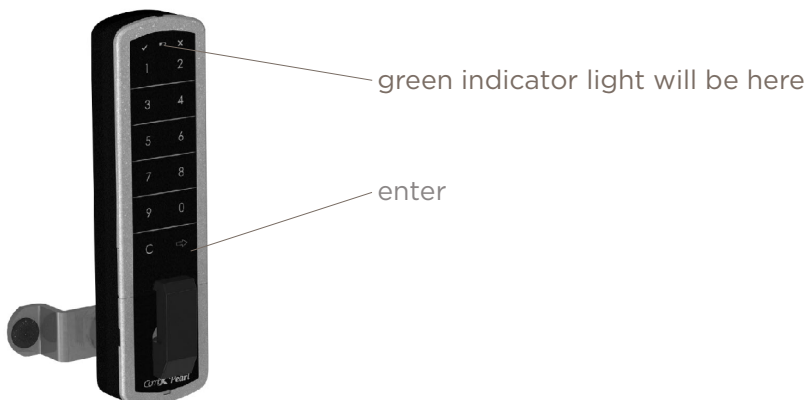




Padlock hasp + keyed instruc-

Padlock hasp

Shackle should be less than 5/16" around (this is the largest diameter that will fit in the hasp hole)

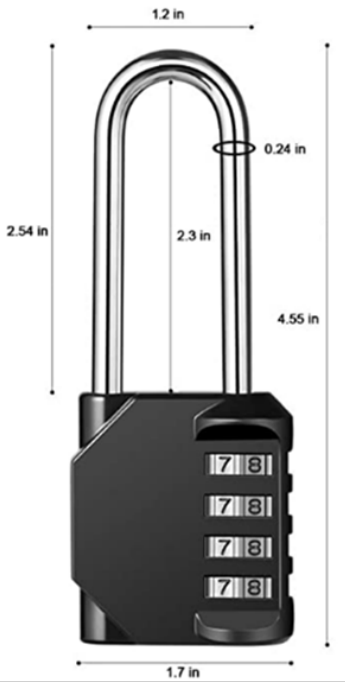


Key lock specific

Using lock option

When using "LOCK" option your cores and keys must be ordered separately by ordering LOCK-SET(s) (see below for ordering instructions) to satisfy the number of locking mechanisms required for product on your PO.

Five lock core models are available to pick to be field installed.

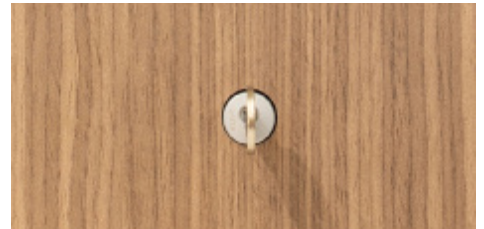

LOCK-SET-1

This includes 1 core & 1 key




LOCK-SET-2

This includes 2 cores & 2 keys




LOCK-SET-3

This includes 3 cores & 3 keys




LOCK-SET-4

This includes 4 cores & 4 keys



LOCK-SET-5

This includes 5 core & 5 key

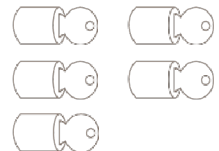

The options available on these models

Option 1: Color (Black, Nickel or

Option 2: Type (Alike, random or

Option 3: Starting Key # (This applies to the alike and consectuvie types

Option 4: Number of sets