

Top View

front

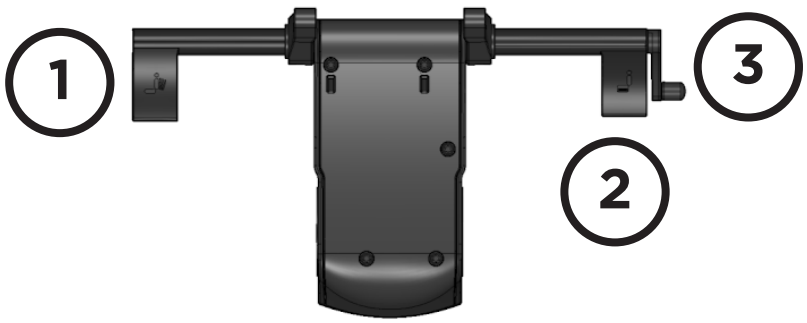

back

Bottom View

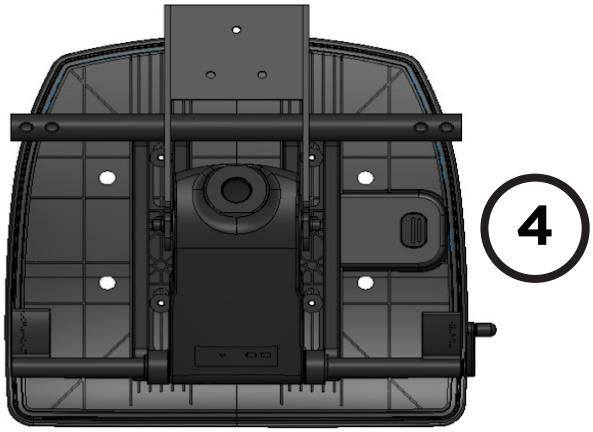

control and seat pan

1. **Back tilt adjustment:** Lift tab up to release tilt, push tab down to lock tilt
2. **Seat height adjustment:** Lift tab up to adjust seat height
3. **Back tension adjustment:** Pull knob straight out then turn clockwise to tighten, turn counterclockwise to loosen, then push knob back in when complete
4. **Seat slider adjustment:** Push in button to allow forward and backward seat adjustment

Available on

- **Pur**