Intermix media panel assembly instructions



Part #: 1566971


# Media panel installation

## For single media panels:

- Place panel face down on a non-marring surface. The side of the panel without the holes will go face down for now.
- 2. Attach the handing brackets to the back (Detail A), using the pre-drilled holes that are already machined into the panel.

# For multi-section media panels:

- 1. Place panels face down on a non-marring surface. The side of the panels without the holes will go face down.
- 2. Install the (2) dowel pins (hardware kit) **HK-59** into the connecting edge of each side panel.
- 3. Align the side panels with the center panel and then pull the (3) pieces together.
- Center the mending plates (hardware kit) HK-60 and attach them on each seam using the pre-drilled holes that are already machined into the panels. (counter-sunk holes in the mending plates should be face up)
- 5. Secure these plates with the (6) screws that are provided (hardware kit) **HK-60**.
- 6. Attach the handing brackets to the back (Detail A), using the pre-drilled holes that are already machined into the panels.

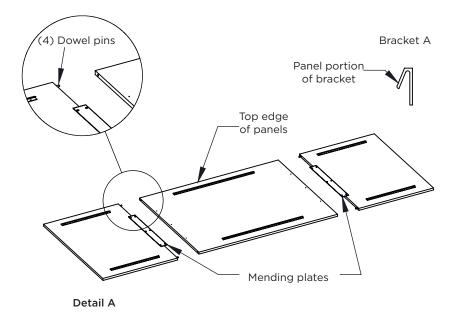


Part #: 1566971

#### Media panel installation

## Hanging wall brackets:

- Using a carpenter's level, draw a level horizontal line (Line A) where you want the top edge of the panel to be located.
  - Draw a second line (Line B) 4  $\frac{1}{2}$ " below Line A.
  - Draw a third line (Line C) 39 1/4" below Line A.
- 2. Position the wall brackets (Detail B) so the bottom edges are on lines B and C and are also positioned so they will line up with the brackets that are mounted onto the back of the panels. A small level is included and can be snapped onto the wall bracket to aid with installation (Bracket B). Mark the hole locations.
- 3. Drill holes into the wall where marked and fasten the wall brackets. Hardware is provided, but may not be appropriate for your wall type. A professional contractor should determine the best attaching hardware for each specific application.
- 4. Remove the small level from the wall brackets once they are attached to the wall.
- 5. Hang the panel assembly onto the wall brackets, both parts (Brackets A and B) of the metal hanging brackets shall interlock together (Detail C).

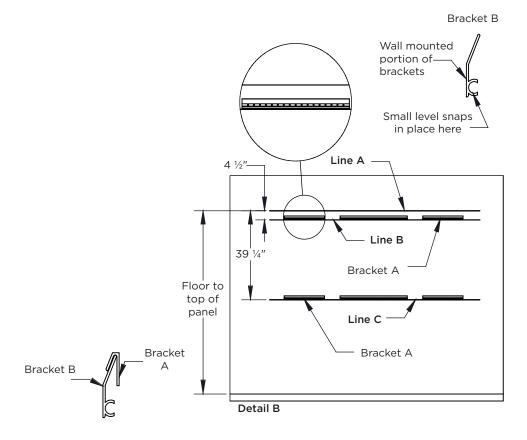

Detail C