

Beck glass top assembly instructions

Glass top assembly instructions:

Tools required:

- HK-261 enclosed hardware kit
- Screwdriver

1. Remove shipping top/form and place on floor. Insert bottom of legs into the cutouts. **(Figure A)**
2. Place glass top on base & align inserts with the holes in the glass top. Install the low profile caps into the insert nuts and tighten caps with neoprene wrench. Remove form and insert levelers. **(Figure B)**
3. On 42", 54"& 60" units, add (1) of the 3" screws from the hardware kit "hk-261" to the bottom of each leg where the predrilled holes are located.

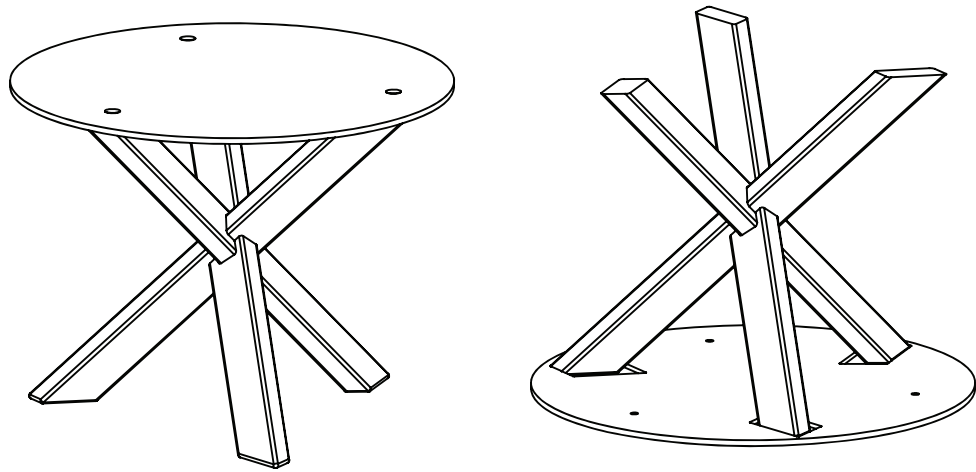


Figure A

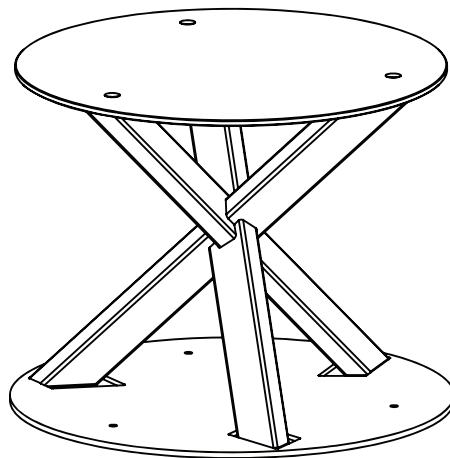


Figure B