

Rowen storage assembly instructions




Rowen storage leg assembly

1. This sheet covers the necessary steps to attach the support beam and legs to Rowen storage units.
2. Begin by inserting the square tube leg into the collar on the support beam. Secure the leg by fastening the $\frac{5}{16}$ -18 x $\frac{7}{8}$ " screw through the support beam and into the leg, as shown below. Next, thread the leveler completely into the bottom of the leg. Repeat for the remaining legs and beam.
3. Attach the beam assembly to the bottom of the credenza or bookcase by fastening the supplied #10 x $\frac{7}{8}$ " screws through the beam and into the bottom panel, as shown below.

NOTE: The credenza's will have pocketed areas in the bottom panel for the support beams while the bookcase will have the support beams placed directly against the outer edges of the bottom panel.

Tools required:

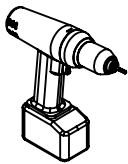

Drill



$\frac{3}{16}$ " Allen wrench

