

ROOM x Carolina Phone Booth User Manual



Index

- 06** Product Details and Features
- 08** General Product Information
- 10** Safety Instructions
- 12** Care and Maintenance
- 14** Guarantee and Warranty



Oncology ↑
Administration ←

15

14

13

12

ROOM	PREL
ROOM	PREL
ROOM	OS04
ROOM	PREL
ROOM	AS01
ROOM	AS02
ROOM	OS05
ROOM	PREL
ROOM	PREL

ROOM carolina


ROOM carolina

Real privacy happens here.

We designed the ROOM x Carolina Phone Booth for focus, clarity and moments alone in high-traffic healthcare environments, whether it's a private patient conversation, a brief pause for caregivers or any task that demands discretion.

You can rest easy knowing that the soundproofing materials in this booth are made from more than 1,000 recycled plastic bottles, and every surface is wipeable and bleach-cleanable to support a pristine space, day and night.

The Details

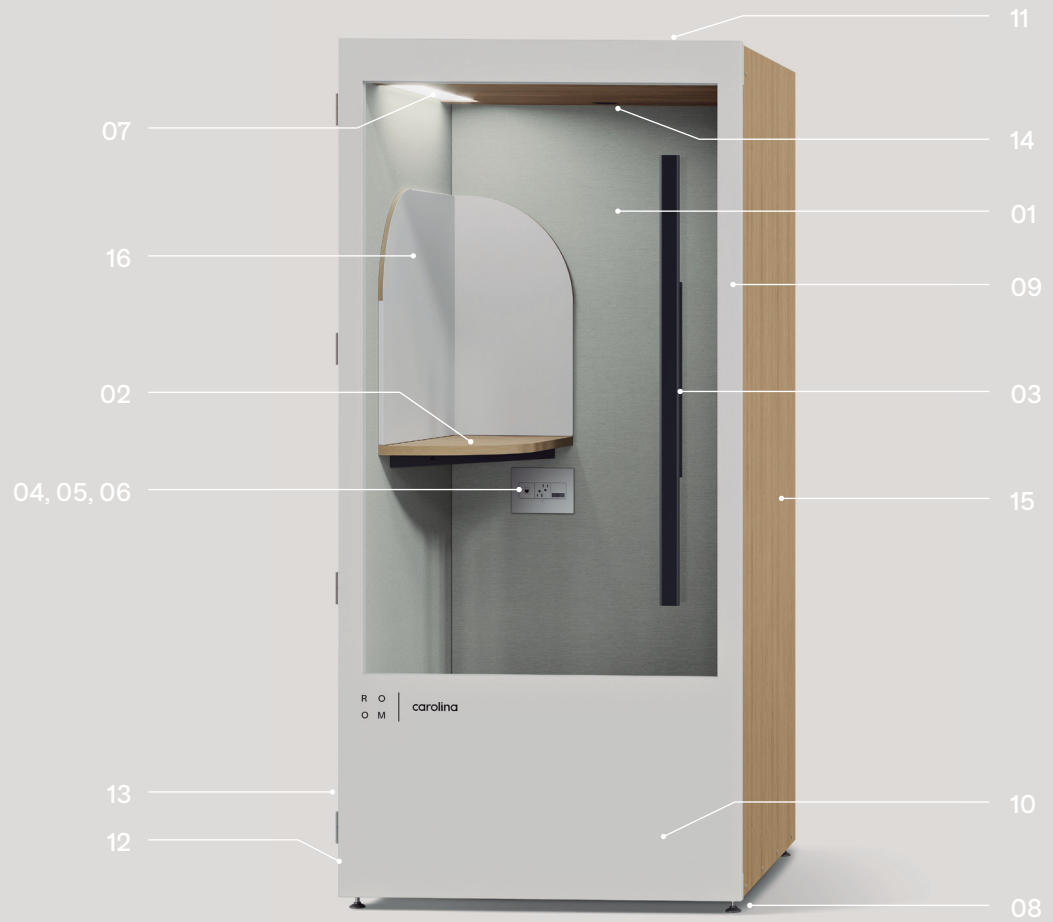

- 01 Custom Interior Textile**
Bleach-cleanable interior wall fabric backed by Tekloom® technology creates sterile, safe touchdown spaces while protecting privacy.
- 02 Built-In Desk**
A 31.5" wide desktop in HPL oak finish gives you ample space with a wipeable surface.
- 03 Powder-coated Door Handle**
Anthracite metal door handle is hygienically designed for easy wipe-down, opening the door to pristine privacy.
- 04 Power Outlets**
Two outlets keep you powered up for every charged workstation.
- 05 Ethernet Port**
CAT6 RJ45 plug ensures you never miss a connection.
- 06 Motion Sensor**
Smart sensor activates the light and fans, helping you stay energy efficient.
- 07 LED Light**
Overhead LED light strip ensures bright ideas don't stay in the dark.
- 08 Leveling Feet**
Adjustable feet compensate for uneven surfaces, so everyone stays level headed.
- 09 Magnetic Door**
Acrylic panel with magnetic seal, housed in a metal frame, minimizes noise and keeps office banter out.
- 10 Industrial Grade Carpet**
100% solution-dyed PET for higher resistance to wear and tear.
- 11 Ceiling Fans**
Two ultra-quiet fans keep you cool under pressure.
- 12 Airflow Inlet**
Discreet inlet, removable for easy cleaning, optimizes airflow.
- 13 Plug**
Located in the back, a standard plug (120V) with a 10ft power cord gives you freedom to make room where you need it most, no hardwiring required.
- 14 Sprinkler Access Hole**
Removable caps allow access to a pre-drilled sprinkler hole to ensure a path to compliance in all markets.
- 15 Sustainably Soundproof**
Made from recycled PET and engineered to reduce noise by 32dB.
- 16 Magnetic Board**
Designed to house your favorite accessories, the magnetic board ensures you stay organized.

General Product Information

Environmental friendliness

The ROOM x Carolina Phone Booth is SCS Indoor Advantage Gold Certified. Indoor Advantage Gold is SCS Global Services' highest level of indoor air quality performance for furniture. The certification assures that furniture products support a healthy indoor environment by meeting strict chemical emission limits for volatile organic compounds (VOCs).

Our PET uses 60% recycled plastic bottles. The light draws 12W and the fan draws 1.75W, both at 12V. Both the light and fans are activated by a motion sensor for energy efficiency.

Fire safety

All materials over 10 square feet conform to UL 962 flammability requirements.

Seismic safety

If your building requires seismic anchoring, you can fix the booth to the floor with anchor bolts. Please reach out to our support team for instructions and materials.

Air quality and flow

The fans pull 59 cubic feet per minute. All the air inside the booth is refreshed every minute.

Certifications

Conforms to UL STD 962.
Certified to CSA
STD C22.2 No. 0.4.

SMOKE DEVELOPED
INDEX OVER 450.

Meets or exceeds
all applicable BIFMA
standards.



Safety Instructions

Distributed by OFS Brands
Holdings Inc., Huntingburg,
IN 47542

Assembled in USA

For patent or patent application information,
visit room.com/patents

California 9312.2(a) Compliant for
Formaldehyde. TSCA Title VI compliant.

Conforms to UL STD 962.
Certified to CSA STD C22.2 No. 0.4.

Power: 120VAC (NA) / 8A (MAX), 60Hz

WARNING - Risk of fire and shock, Use only SJTW or SJT type 14 AWG cord

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following. Read all instructions before using.

- 1. DANGER – To reduce the risk of electric shock:** Always unplug this furnishing from the electrical outlet before cleaning. Connect this furnishing to a properly grounded outlet only.
- 2. WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:** Unplug the outlet before putting on or taking off parts.
3. Close supervision is necessary when this furnishing is used by, or near, children, invalids, or disabled persons.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. To prevent a trip hazard, make sure the power cord is kept free from walkways and properly wrapped behind the room. If more than two feet of the cord is exposed, cable drops should be used to keep the cord off the floor.
7. Keep the cord away from heated surfaces.
8. Wrap and protect cord during storage to avoid any accidental damage.
9. Never operate the furnishing with the air opening blocked. Keep the air opening free of lint, hair, and the like.
10. Never drop or insert any object into any opening.
11. Do not use outdoors. Only use in dry indoor environments.
12. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
13. To disconnect, remove plug from outlet.
14. This unit is for use on a nominal 120-volt circuit in North America. Make sure that the product is connected to an outlet having the same configuration as the plug, protected by an approved branch circuit breaker rated to a maximum of 20A. No adapter should be used with this product.
15. This unit employs a 10A circuit breaker located on the back of the room next to the power outlet. Flip to reset if necessary.
16. This unit is a Type I furnishing system and is intended to be used as a movable furnishing in an office environment, not as a fixed part of the building structure.
17. Total load on convenience outlets should not exceed 860W.

Care and Maintenance

For all of us, a little TLC can go a long way. Your booth is no different. Here's the proper way to care for your booth:

Clear plexiglass pane

Spray both sides with a plexiglass cleaner. Gently wipe away with a soft cloth. Avoid glass cleaners with alcohol, as they can seriously damage the booth surface.

Outside walls

Avoid prolonged exposure to direct sunlight, high humidity, extreme heat or cold, and moisture. Dust frequently with a soft, damp, clean cloth or mild detergent solution. Avoid using chemical or abrasive cleaning compounds. To avoid build up of cleaning agents, rinse the laminate surface with warm water and wipe with a clean damp cloth.

Fans

When it comes to taking care of the fans on top of the booth, there's no need to break a sweat. Regularly dusting them will keep them in good shape.

Carpet

This one is easy: Vacuum it like the carpet you have at home. For spot treatments, use a carpet cleaner. Don't forget to give yourself a pat on the back when you're done.

Door, door frame & magnetic board

When it comes to removing stains or smudges, there's nothing like a damp magic eraser.

Floor grate

What's underneath your feet matters. Remove the floor grate and vacuum the inside to keep it clear of dust.

Interior wall fabric

While the textile is inherently stain resistant, it is important to keep it clean at all times to maintain the original look and feel. Spot cleaning with a clean, soft towel with clean water will remove most of the everyday stains. The textile can also be disinfected with a 10:1 bleach dilution of water/bleach. Apply with a misting spray bottle and gently scrub the affected area with a sponge or soft bristle brush. Allow the mixture to linger for the time specified by the CDC. Rinse all cleaning agents thoroughly with water and wipe with a soft cloth.

Guarantee and Warranty

When we say we're here for you, we mean it. We cover the full cost of repairs or replacements needed due to manufacturing defects. Contact your ROOM or Carolina representative for specific details surrounding the Phone Booth Warranty.

If you have any questions or are experiencing issues with your unit, please reach out to:



support@room.com



+1 646 791 3726

